PROSLAT

WALL INSTALLATION INSTRUCTIONS

PLEASE DO NOT TAKE THIS PRODUCT BACK TO THE STORE!

PLEASE CALL: 1-888-691-2944

INSTALLATION VIDEO

PROSLAT.COM/proslat-videos

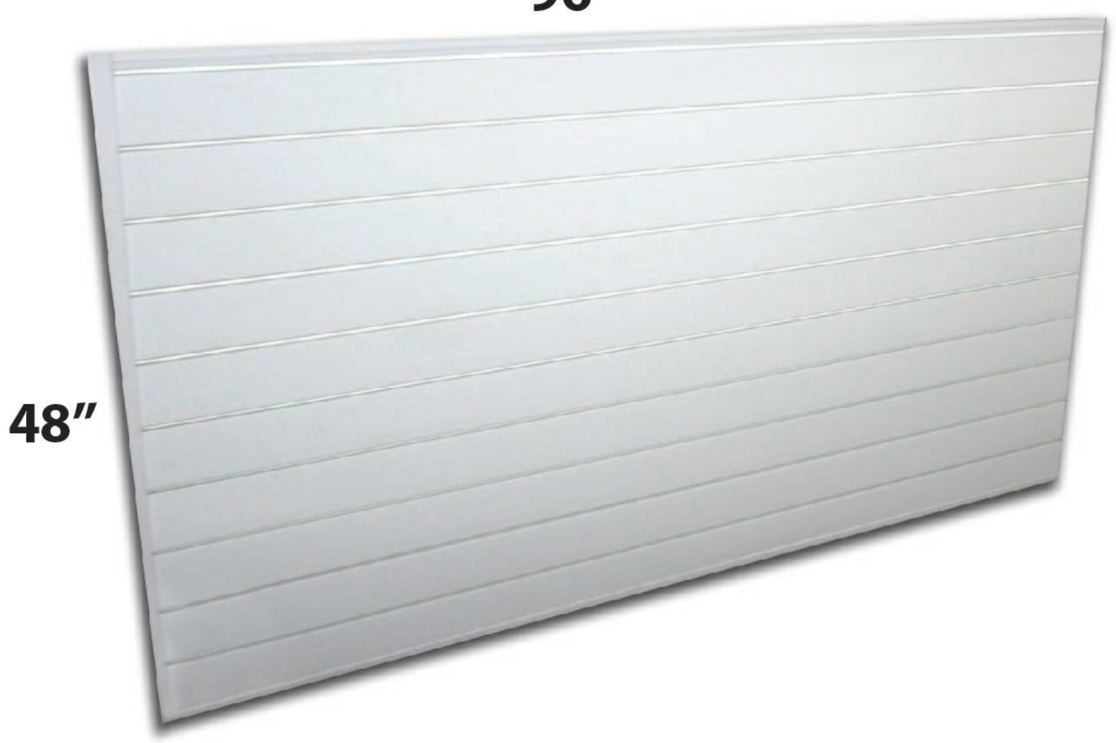

TOOLS NEEDED:

- DRILL
- LEVEL
- STUD FINDER
- SNIPS

Some kits include 2.5” screws.
These may be too long.
See below for screw lengths.

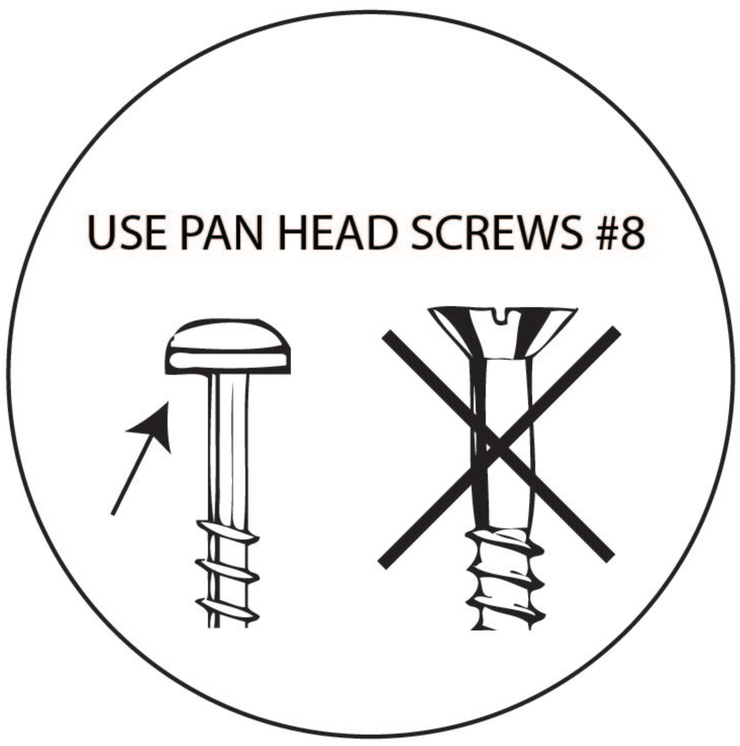

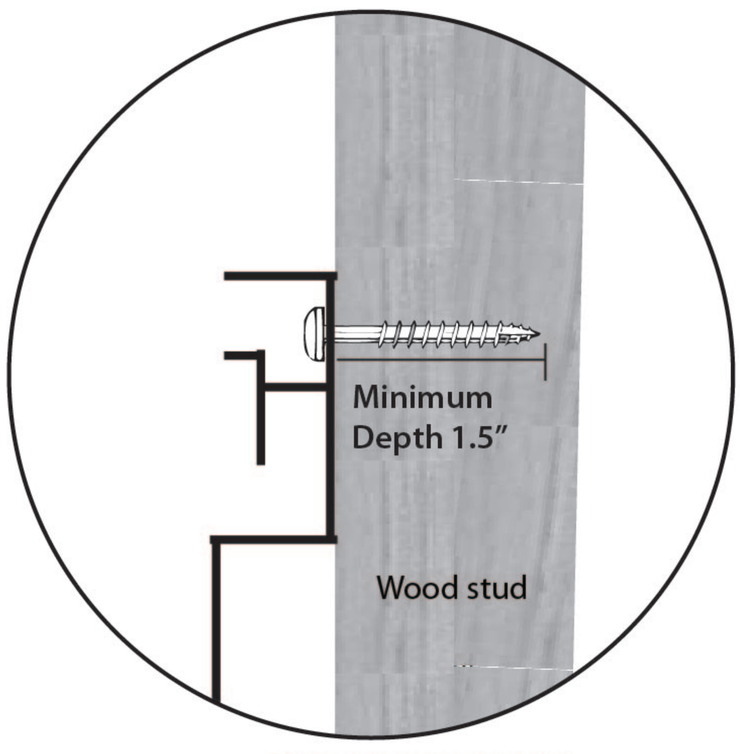

DIRECTLY ON STUDS
USE 1.5” SCREWS

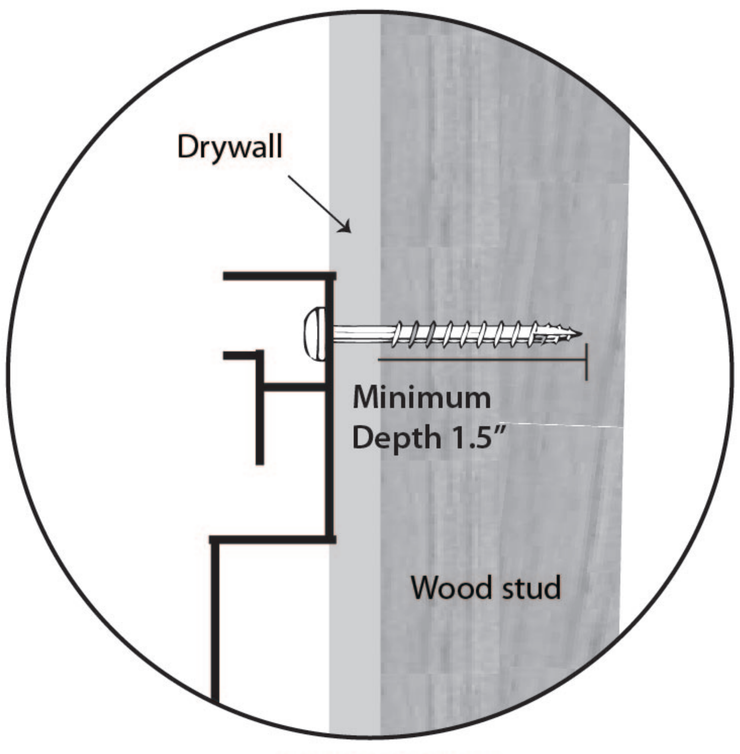

OVER DRYWALL
USE 2” SCREWS

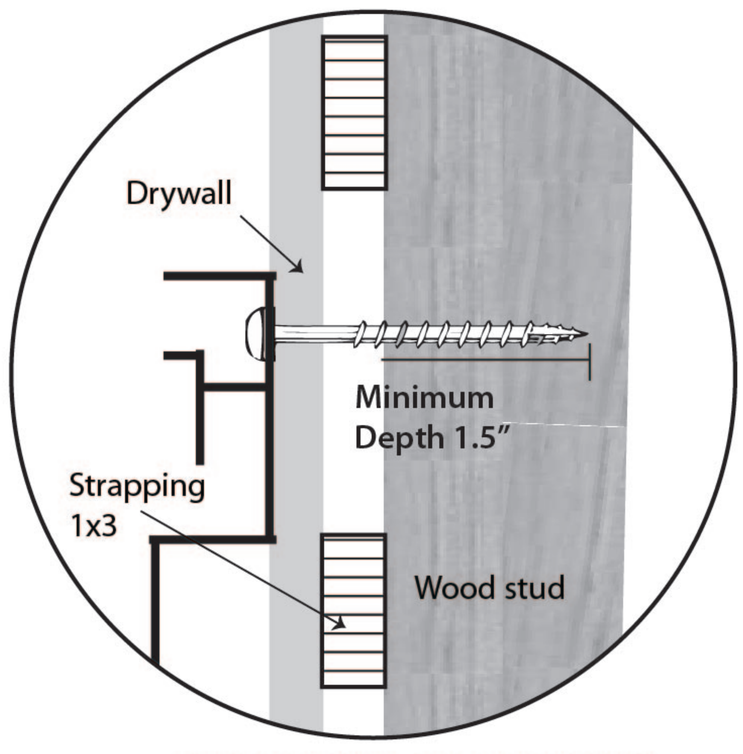

OVER DRYWALL AND STRAPPING
USE 2.5” SCREWS

77 rue Saint-Laurent, Beauharnois, QC, Canada, J6N 1V1

1.
Locate your stud centers and draw a vertical line to identify stud centers.

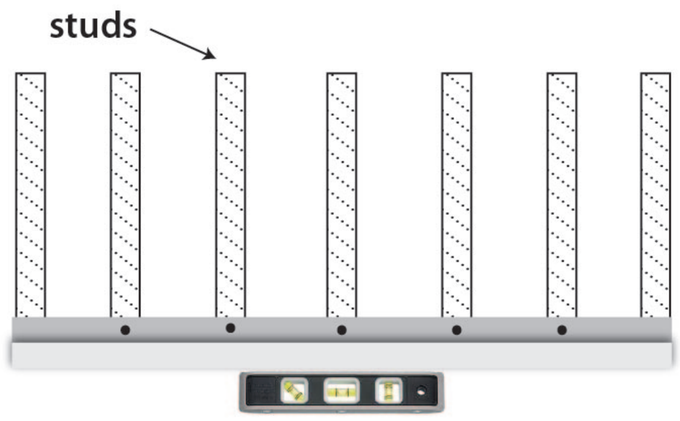

2.
Measure and cut one of your J trims at 96". Install this bottom horizontal J trim at the desired height and screw into your middle stud. For maximum strength, always try to start and end your section over studs. Making sure the bottom J trim is level, install screws on the studs to the left and right hand side. Do not install a screw in the first or last stud at this time.

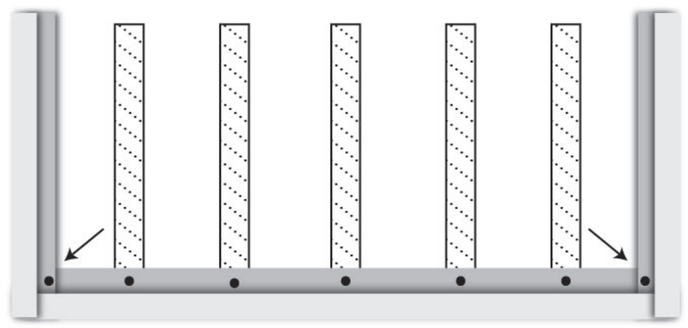

3.
Install left and right vertical J trims. If you have purchased only one box of Proslat panels you will need to cut your J trim in half (exactly 48.5") for the left and right side. Make sure to overlap the vertical J with your bottom J and screw through both.

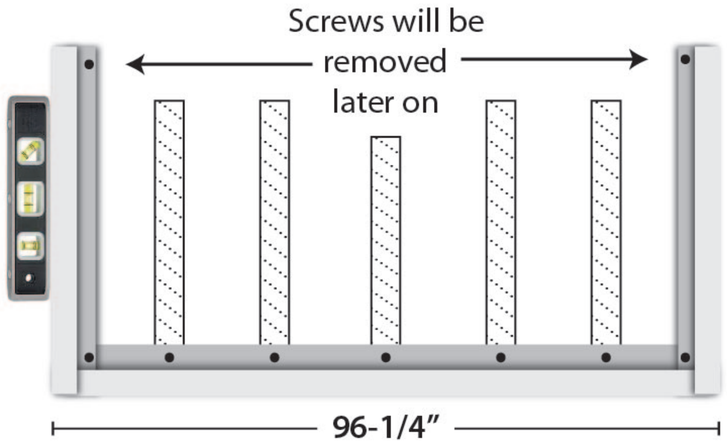

4.
Once you have attached the bottom of vertical J trims to your wall, level and install one screw at the top of each to hold in place. No need to tighten this screw all the way as this screw simply holds the J trim level temporarily. Once you have installed most of your panels, you will remove these and use them for your last panel. The distance between the left and right J trim should be 96-1/4" exterior to exterior.

5.
In order to insert your panels into the J trims, slightly curve each panel.

Questions?
1-888-691-2944
info@proslat.com

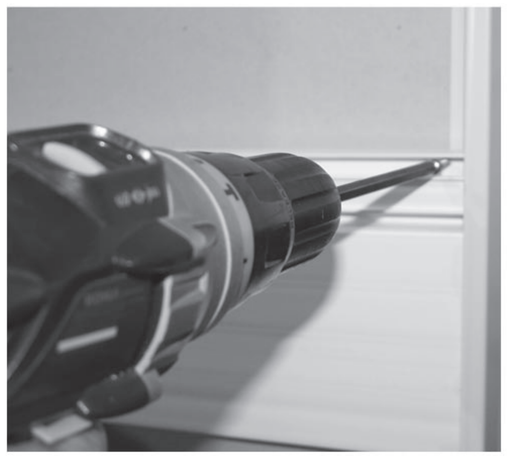

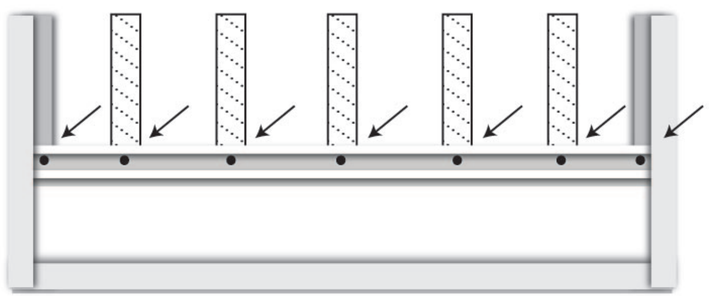

6.
Install first panel by screwing through the upper cavity. Make sure to screw into every stud (16") along each panel. Screws at each end of the panels will also go through the vertical J trims and hold them in place.

7.
Continue installing panels making sure to properly interlock.

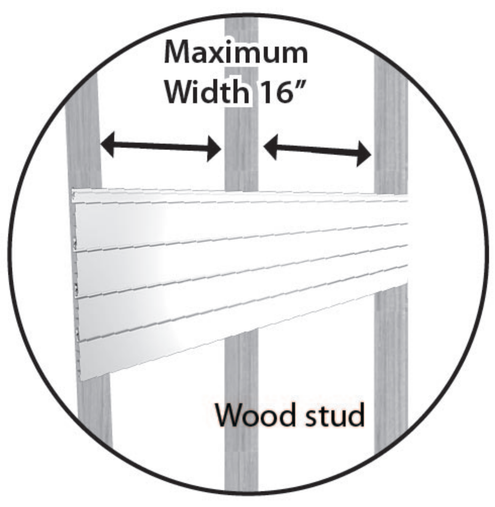

IN ORDER TO SUPPORT 75 LBS PER SQUARE FOOT. YOUR STUDS MUST BE A MAXIMUM OF 16" APART.

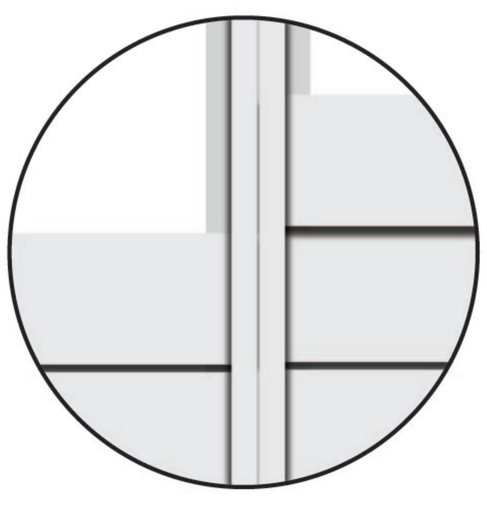

IF YOU ARE INSTALLING WIDER THAN 8 FT. OF PANELS, USE TWO J TRIMS BACK TO BACK TO HIDE THE JOINT.

YOUR BOX CONTAINS

10 panels
2 J trims (one for bottom, second for left & right sides)
1 L trim

If you have purchased your panels on costco.ca in Canada, your kit has an extra J trim and L trim. These are only needed if you decide to install your panels in a 16' X 2' configuration.

PROSLAT WALL PANELS SUPPORT UP TO 75 LBS PER SQUARE FOOT
10 YEAR LIMITED WARRANTY - VISIT WWW.PROSLAT.COM FOR COMPLETE DETAILS